

XILLO


INNOVATIVE RECESSED SOLUTIONS

INTEGRATED
SOCKET NO GAP
2V



Order codes

- TRIM SOCKINT2_NG
 - 2x SOCK6MM_mount
 - SOCK6MMINT2_mount
 - 2x TRIM_SPACER05
 - TRIM_SOCKKIT2_NG
 - XILLO® fixture
 - TRIM_SPACERKIT
 - 1x TRIM_SPACER2
 - 3x TRIM_SPACER05

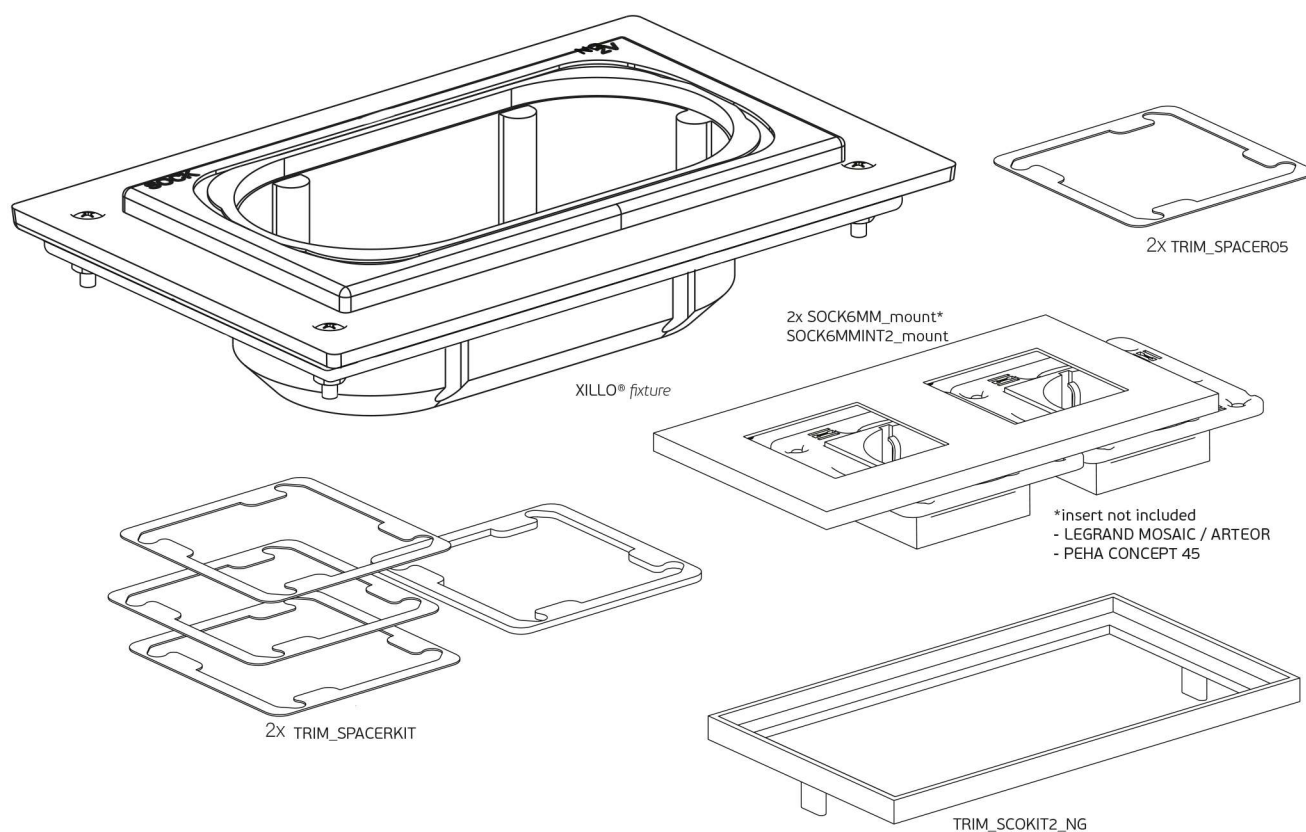

- ADHESIVES

XILLO® fixture

- INTINT_KIT_BACKBOX_SMALL

- worktime: 5min
- drying time: 15min
- number of uses: 5





- INTINT_PISTOL_BACKBOX_SMALL




INSTALLATION

STEP 1: DRILLING OF THE DIFFERENT HOLES AT THE FRONT

*Drill the holes for the socket from the frontside towards the backside.
(for stone: normally done by waterjet)*

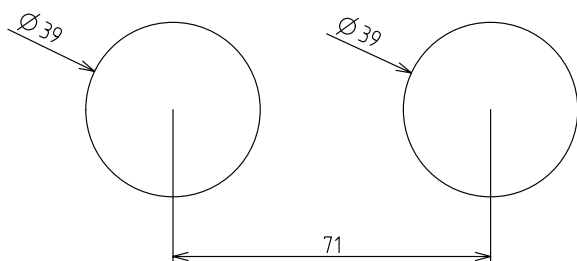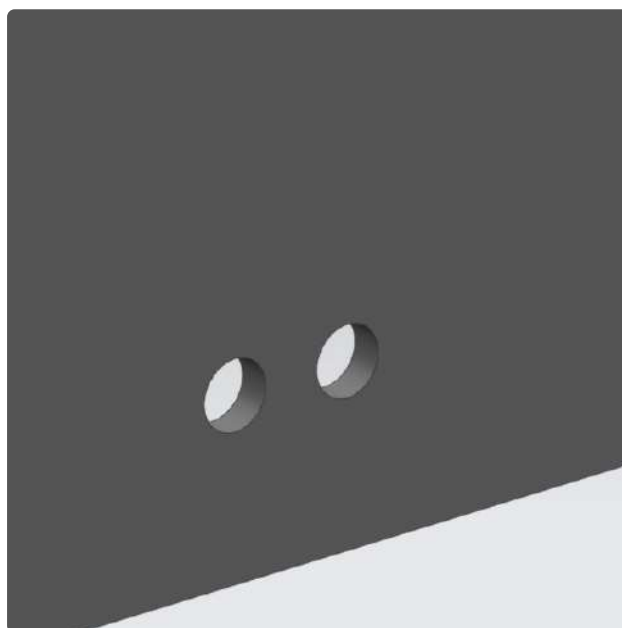

SOCK German/French Standard

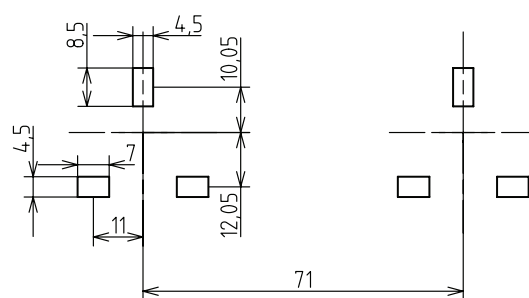




SOCK British Standard

Drill/Waterjet the center of the opening at the desired operating height from the floor
(recommended 25cm)

INSTALLATION

STEP 2: CUTOUT AT THE BACK


After the opening is made at the front you can now make a rectangular hole of 87,5 mm x 158,5mm at the backside . Beware when making the rectangular hole to leave precisely 5mm of material at the frontside. Center the rectangular hole according to the center of the front opening from step 1.

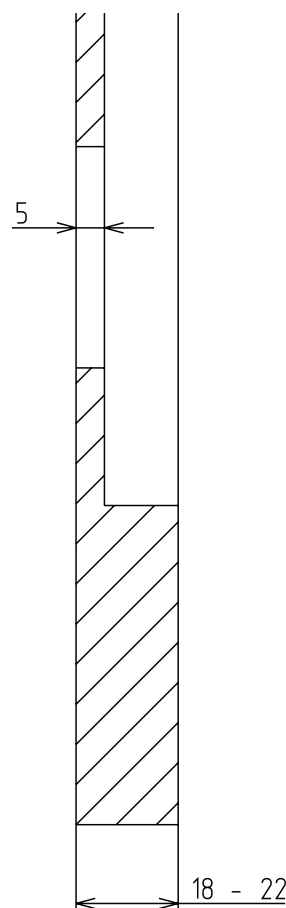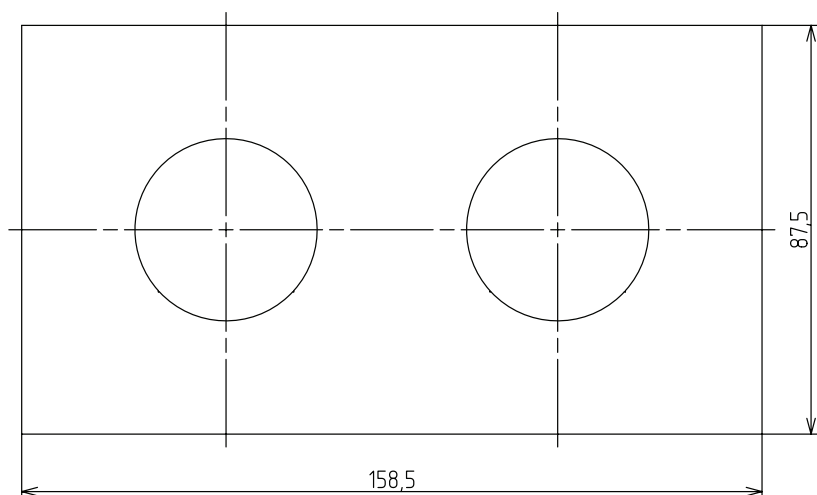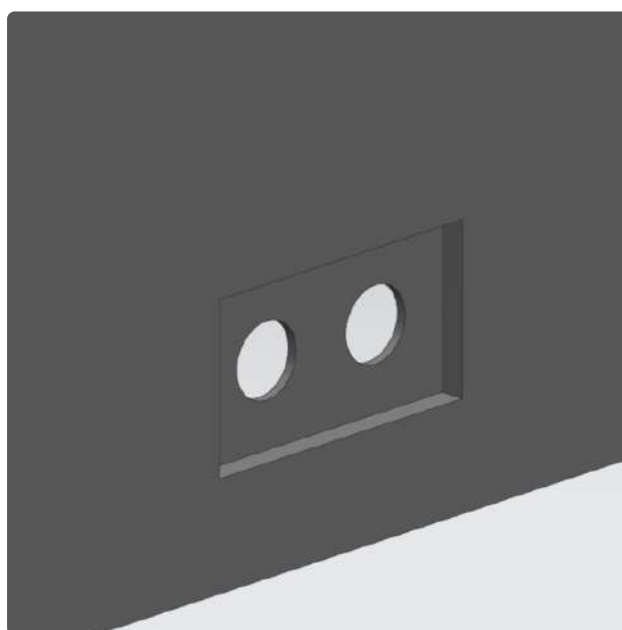

INSTALLATION

STEP 3.1: MOUNTING XILLO® FIXTURE (plate) TO WALL OR PANEL

1. Assemble the two parts of the Xillo® fixture (plate and insert)
2. Take the electronics (SOCK6MM_mount, SOCK6MMINT2_mount & inserts for the socket) and install them on the XILLO® fixture. You can use the installation tool (TRIM_SOCKET2_NG) to place all in the middle of the fixture. Remove the installation tool afterwards


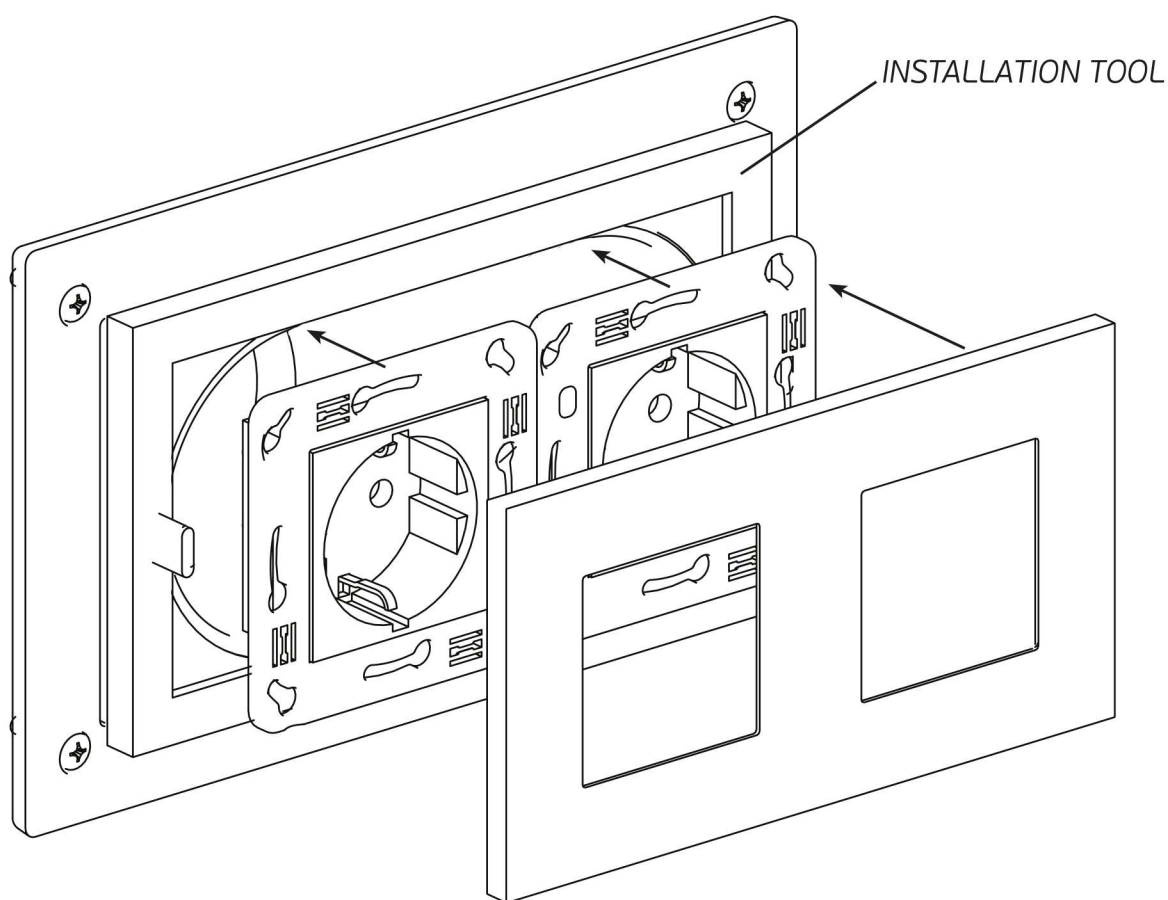


INSTALLATION

STEP 3.2: MOUNTING XILLO-FIXTURE (plate) TO WALL OR PANEL

Glue the fixtures plate on the backside of the wall/panel with one of the suggested adhesives. Apply glue on the fixture or on the wall/panel. Beware to press/hold it according to instructions of the glue. (make sure it's mounted level).

NOTE: when glued on the wall/panel make sure that it is properly clamped during drying!

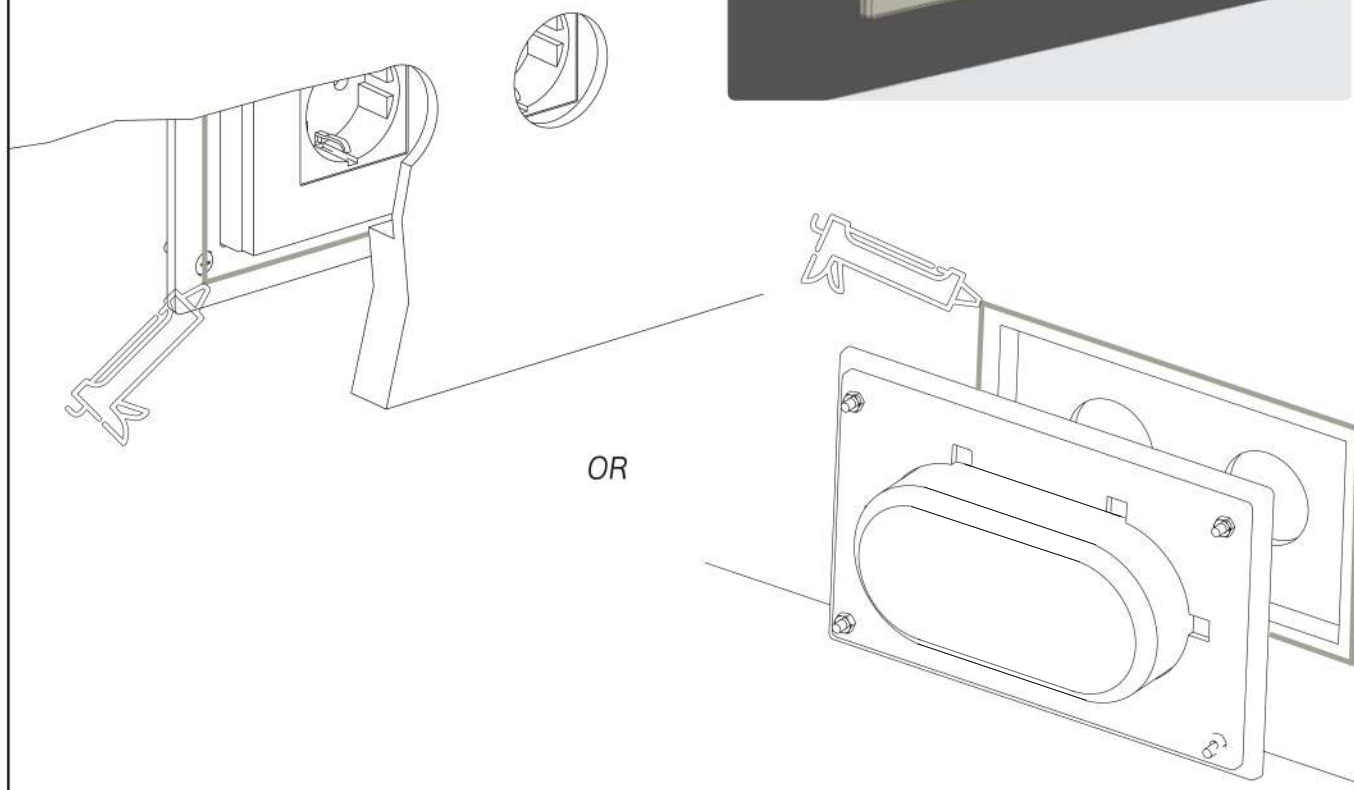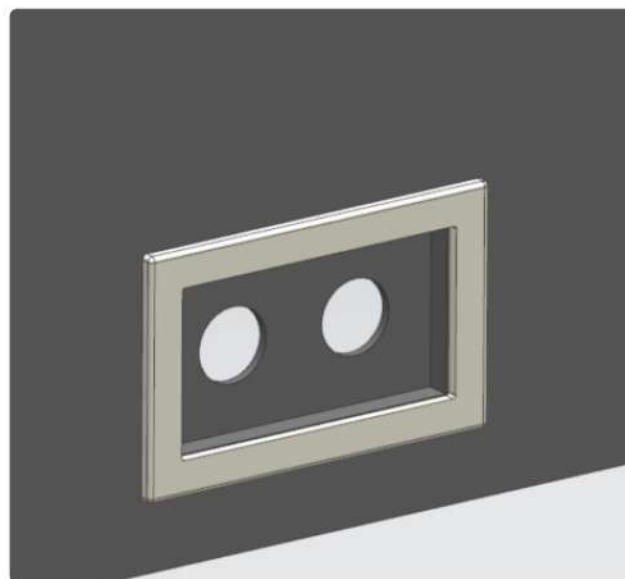


INSTALLATION


STEP 4: CONNECT ELECTRICS

When the glue has dried completely, you can unscrew the four nuts of the XILLO® fixture plate.

- 1. Connect power cables to the socket inserts*
- 2. Reassemble on the XILLO® insert (place minimum one spacer TRIM_SPACER05)*
- 3. The SOCK6MMINT2_mount must be installed with an audible click. Excessive press fitting can wear out the plastic part. Limit the press fits to maximum two times during installation*

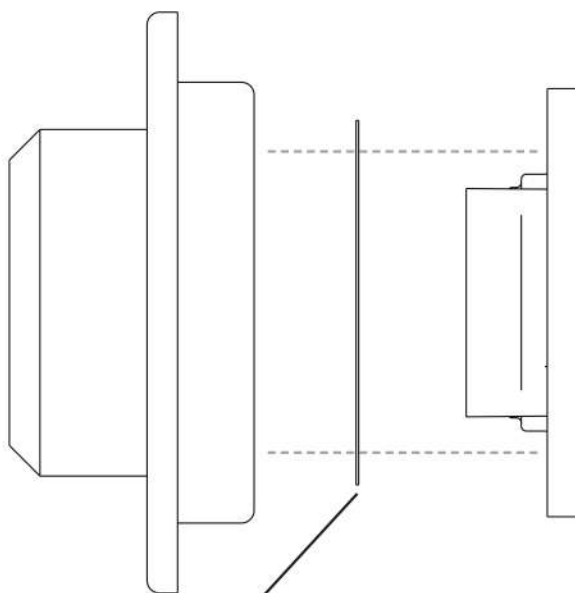

*minimum one spacer TRIM_SPACER05 is needed
between the socket and the XILLO® fixture*

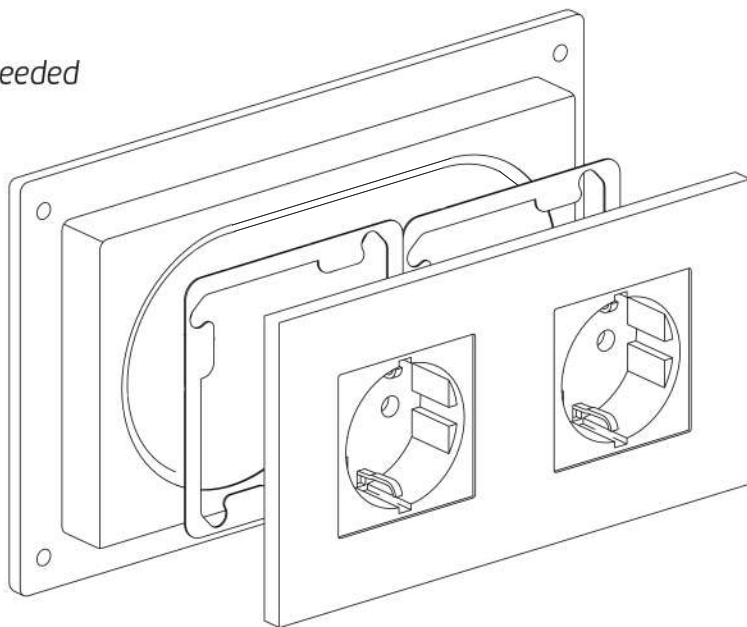

NOTE: when making use of one or more spacers, make sure to peel off the blue/transparant protection foil of the spacer

INSTALLATION

STEP 5: END ASSEMBLY

Install STEP 4 on the glued XILLO® fixture plate. Tighten the nuts, but be careful not to over tighten because the material at the front of the wall/panel can break due to excessive pressure.

